


Trailer Hookup or Temporary Service

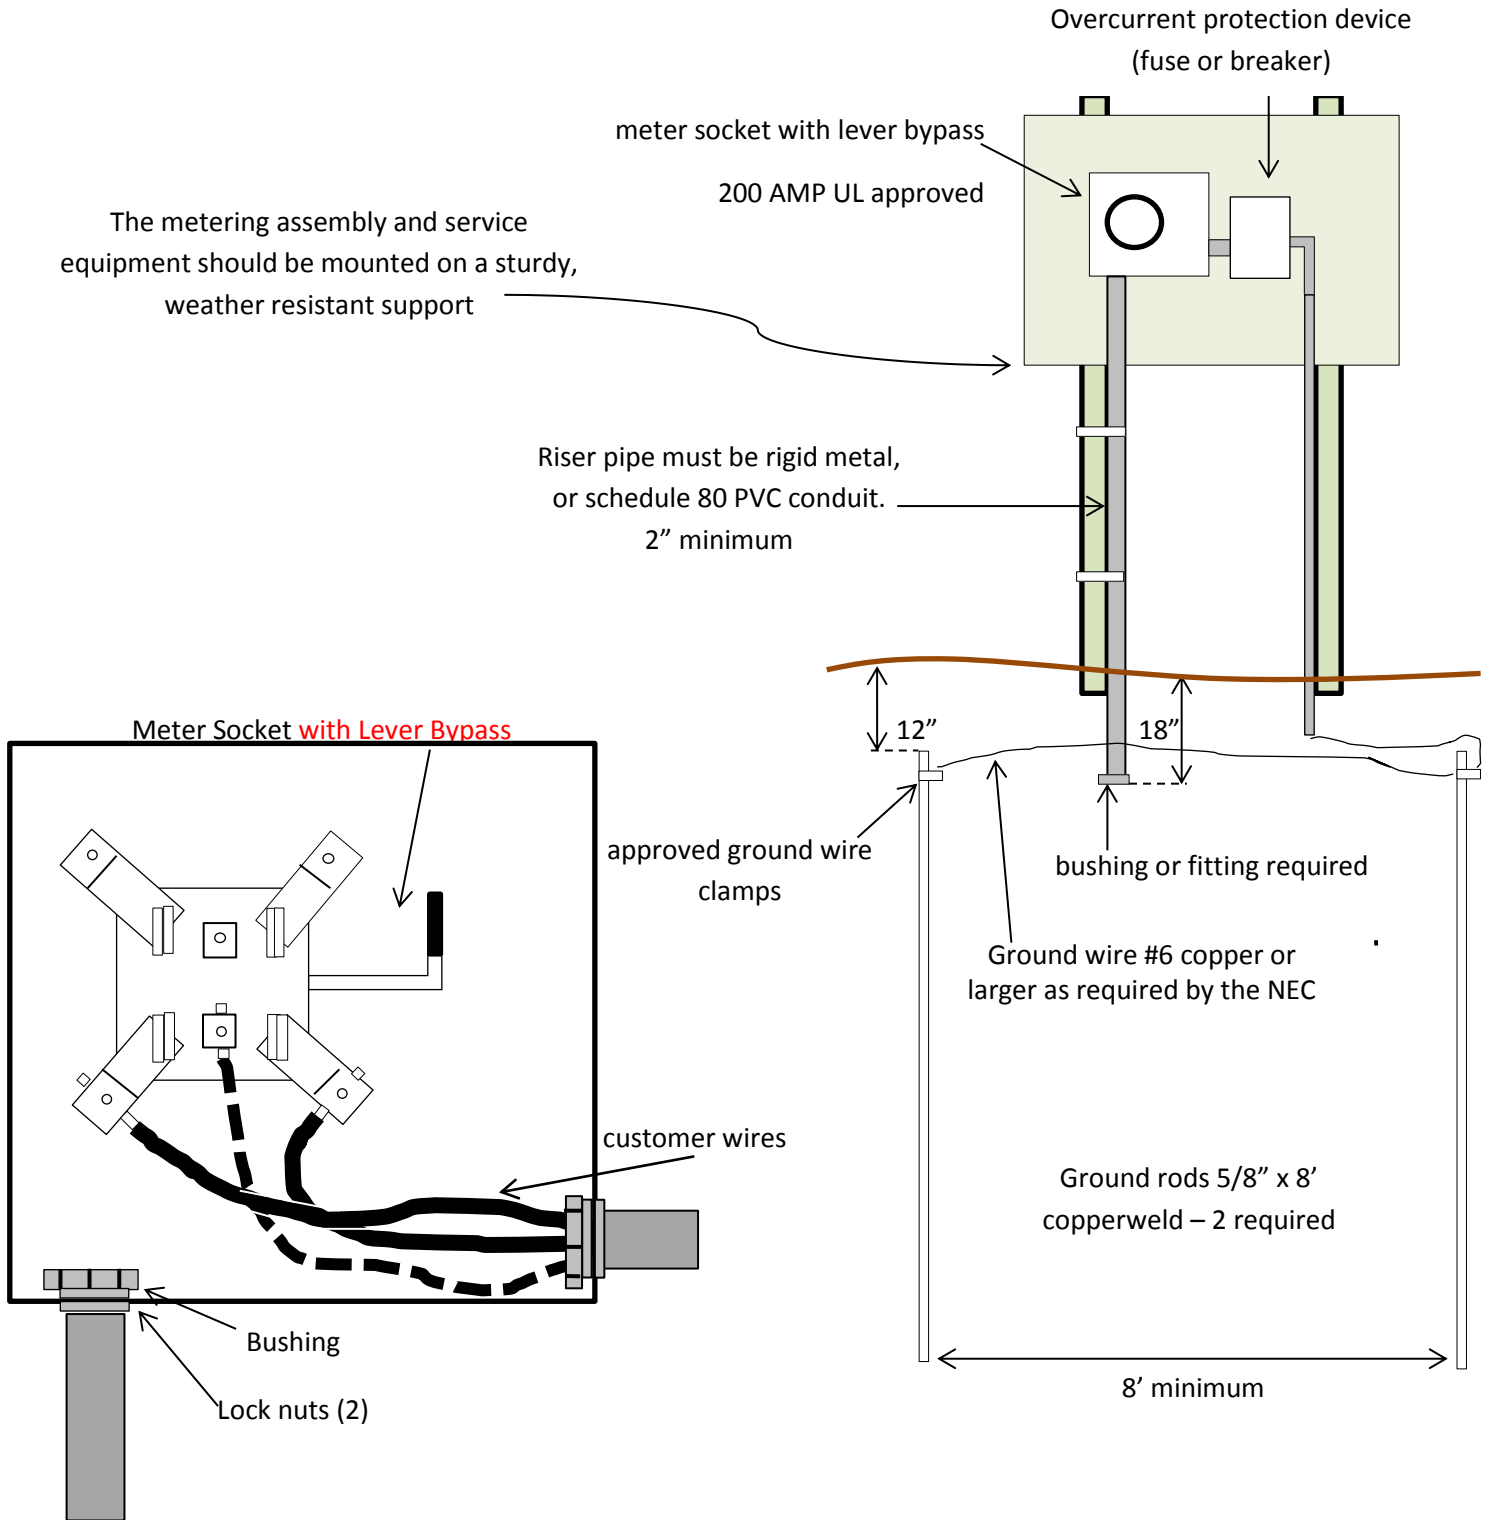

1. Materials in metering assembly are furnished by the customer. (everything you see on this page)
2. Our company wires should enter the meter socket through the bottom left knockout.
3. NWECE requires a signed wiring affidavit from the person who wired this service.
4. The meter socket should be mounted no less than 4 feet, and no more than 6 feet from the ground.